

**SAMSUNG**

# **SGH-E350**

## **User's Guide**





# Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

## Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

## Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

## Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

## Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.



## Interference

All wireless phones may be subject to interference, which could affect their performance.

## Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


## Water resistance

Your phone is not water-resistant. Keep it dry.

## Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

## Emergency calls

Key in the emergency number for your present location, then press .

## Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

## Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

## Qualified service


Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 89.

# About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
- Indicates that you can get more information on the referenced page.
- Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [ ] Indicates a key on the phone. For example, [OK/⌂].
- < > Indicates a soft key, whose function is displayed on the phone screen. For example, <Menu>



- **Camera and camcorder**  
Use the camera module on your phone to take a photo or record a video.

## *Special features of your phone*



- **MP3 player**  
Play MP3 music files on your phone.



- **IrDA**  
Send and receive Phonebook and File manager data via an infrared port.



- **Get personal with photo caller ID**

See who's calling you when the phone displays their very own photo displays.



- **Name card**

Create name cards with your number and profile. Whenever introducing yourself to others, use this convenient electronic name card.



- **Web browser**

Access the wireless web and access various services and current information.

- **Multimedia message service (MMS)**

Send and receive MMS messages with a combination of text, images, video, and audio.

- **E-mail**

Send and receive e-mails with images, video, and audio attachments.



- **Java**

Enjoy Java™-based embedded games and download new games.



- **Calendar**

Keep track of your daily, weekly, and monthly schedule.



- **Voice recorder**

Record memos or sounds.

## Contents

### **Unpack** 6

*Make sure you have each item*

### **Your phone** 6

*Buttons, features, and locations*

### **Get started** 7

*First steps to operating your phone*

Install and charge the phone ..... 7

Power on or off ..... 8

Keys and display ..... 9

Access menu functions ..... 11

Customise your phone ..... 12

Make/Answer calls ..... 14

### **Step outside the phone** 14

*Begin with your camera, music, and other special features*

Use camera ..... 14

Play MP3s ..... 15

Play games ..... 16

Browse the web ..... 17

Use Phonebook ..... 17

Send messages ..... 19

View messages ..... 20

### **Enter text** 22

*ABC, T9, Number, and Symbol mode*

### **Call functions** 24

*Advanced calling features*

### **Menu functions** 29

*All menu options listed*

### **Solve problems** 87

*Help and personal needs*

### **Health and safety information** 89

### **Index** 96

## Overview of menu functions

To access Menu mode, press <Menu> in Idle mode.

<b>1 Call records</b>	▶ p.29	<b>3 Applications</b>	▶ p.36	<b>5 Messages</b>	▶ p.48	<b>8 Camera</b>	▶ p.71
1 Current contacts	▶ p.29	1 MP3 player	▶ p.36	1 Create new message	▶ p.48		
2 Missed calls	▶ p.30	2 Voice recorder	▶ p.38	2 My messages	▶ p.50		
3 Dialed calls	▶ p.30	3 Java world	▶ p.40	3 Templates	▶ p.56	<b>9 Settings</b>	▶ p.77
4 Received calls	▶ p.30	4 World time	▶ p.41	4 Select and delete	▶ p.57	1 Time & Date	▶ p.77
5 Select and delete	▶ p.30	5 Alarm	▶ p.42	5 Settings	▶ p.57	2 Phone settings	▶ p.78
6 Call time	▶ p.30	6 Calculator	▶ p.43	6 Broadcast messages	▶ p.63	3 Display settings	▶ p.79
7 Call costs*	▶ p.31	7 Convertor	▶ p.43	7 Memory status	▶ p.63	4 Sound settings	▶ p.80
<b>2 Phonebook</b>	▶ p.31	8 Timer	▶ p.43	<b>6 File manager</b>	▶ p.63	5 Network services	▶ p.82
1 Contact list	▶ p.31	9 Stopwatch	▶ p.44	1 Images	▶ p.64	6 Infrared	▶ p.85
2 FDN list	▶ p.32	0 SIM AT*	▶ p.44	2 Videos	▶ p.64	7 Security	▶ p.85
3 Add new contact	▶ p.33	<b>4 Browser</b>	▶ p.44	3 Music	▶ p.65	8 Memory status	▶ p.87
4 Group	▶ p.33	1 Home	▶ p.45	4 Sounds	▶ p.66	9 Reset settings	▶ p.87
5 Speed dial	▶ p.34	2 Bookmarks	▶ p.46	5 Other files	▶ p.66		
6 My name card	▶ p.35	3 Go to URL	▶ p.46	6 Memory status	▶ p.67		
7 Own number	▶ p.35	4 Clear cache	▶ p.46	<b>7 Calendar</b>	▶ p.67		
8 Management	▶ p.35	5 Profile settings	▶ p.46				
9 Service number*	▶ p.36	6 Current profile	▶ p.48				

\*Shows only if supported by your SIM card.

## Unpack

Make sure you have each item



Phone



Travel adapter



Battery



 
User's guide

You can obtain various accessories from your local Samsung dealer.

- ☒ The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.

## Your phone

Buttons, features, and locations

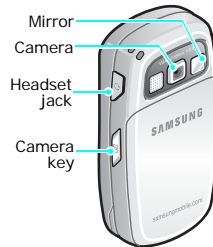



## Get started

*First steps to operating your phone*

### SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.

 
### Install and charge the phone

**1** Remove the battery.



✓ If the phone is already on, first turn it off by holding [⏻].

**2** Insert the SIM card.

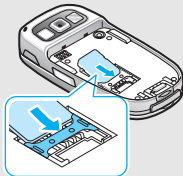


✓ Make sure that the gold-coloured contacts on the card face down into the phone.

**3** Install the battery.



 **4** Plug the travel adapter into the phone.

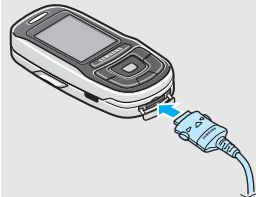

**5** Plug the adapter into a standard AC wall outlet.


**6** When the phone is completely charged, unplug the adapter from the power outlet.

## 7 Remove the adapter from the phone.



### Low battery indicator

When the battery is low:


- a warning tone sounds,
- the battery low message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


## Power on or off

### Switch on

Do not turn on the phone when mobile phone use is prohibited.

1. Open the phone.
2. Press and hold [  ] to turn on the phone.
3. If necessary, enter the PIN and press <OK>.

### Switch off

1. Open the phone.
2. Press and hold [  ].

### Keypad lock

When you close the phone, the keypad lock feature locks the exposed keys so that nothing will happen if the keys are accidentally pressed.

To unlock the keypad, press the left soft key and press <OK>.

## Keys and display



Perform the function indicated on the bottom line of the display.



In Idle mode, access menu options directly. ► p. 78

In Menu mode, scroll through the menu options.



In Idle mode, launch the web browser.  
In Menu mode, select the highlighted menu option.



Delete characters from the display.



Send or answer a call.

In Idle mode, retrieve the recent numbers dialed, missed, or received.



End a call.

Hold down to switch the phone on and off.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.

In Idle mode, hold [1] down to access your voicemail server. Hold [0] down to enter an international prefix.



Enter special characters.

In Idle mode, hold [#] down to activate or deactivate Quiet mode. Hold [\*] down to insert a pause between numbers.



Adjust the phone volume.

In Idle mode, with the phone open, adjust the keypad tone volume. With the phone closed, hold down to turn on the backlight.

 


In Idle mode, hold down to turn on the camera.





In Camera mode, take a photo or start recording a video.

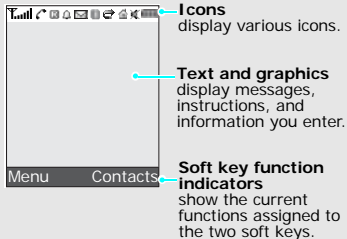






 




## Display

### Layout



### Icons

-  Received signal strength
-  Call in progress
-  Out of your service area; you cannot send or receive calls
-  Alarm set

-  New text message
-  New multimedia message
-  New e-mail message
-  New voicemail
-  Call diverting feature is active
-  IrDA port is active
-  Roaming network
-  Home Zone, if you have registered for the appropriate service
-  Quiet mode is active
-  Call ringer set to vibration
-  ► p. 81
-  Battery power level

## Access menu functions

### Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.



Press the left soft key to access Menu mode.

Press the right soft key to access **Contact list** in the **Phonebook** menu.

### Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>** or [OK/ENTER] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods.
  - Press **<Back>** or [C] to move up one level.
  - Press [END] to return to Idle mode.

### Use shortcuts

Press the number key corresponding to the option you want.

## Customise your phone

### Display language

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

### Call ringer melody

1. In Idle mode, press <Menu> and select **Settings** → **Sound settings** → **Incoming call** → **Ring tone**.
2. Select a ringer category.
3. Select a ringer melody.
4. Press <Save>.

### Idle mode wallpaper

You can set a wallpaper for the idle screen.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Wallpaper**.
2. Select an image category.
3. Scroll to an image by pressing [Left] or [Right].
4. Press <Save>.

### Menu mode skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.

### Quiet mode

You can switch to Quiet mode to avoid disturbing other people with your phone sound.

Press and hold [#] in Idle mode.

### Menu shortcuts

You can use the Navigation keys as shortcut keys to access specific menus directly from Idle mode.

To change a shortcut menu:

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Short cut**.
2. Scroll to a key.
3. Press <**Options**> and select **Change**.
4. Select a menu to be assigned to the key.

### Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on powerup.

1. In Idle mode, press <**Menu**> and select **Settings** → **Security** → **Change password**.
2. Enter the default password, "00000000" and press <**OK**>.
3. Enter a new 4- to 8-digit password and press <**OK**>.
4. Enter the new password again and press <**OK**>.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press <**OK**>.

## Make/Answer calls

### Make a call

1. In Idle mode, enter an area code and phone number.
2. Press [↵].
3. To end the call, press [📞].

### Answer a call

1. When the phone is ringing, press [↵].
2. To end the call, press [📞].

### Adjust the volume during a call

Press [⏮/⏭].

## Step outside the phone

*Begin with your camera, music, and other special features*

### Use camera

#### Take a photo




1. Open the phone.
2. In Idle mode, press and hold [📷] to turn on the camera.
3. Aim the camera lens at the subject and adjust the image.
4. Press [📷] to take a photo. The photo is saved automatically.
5. Press [OK/📷] to take another photo.

#### View a photo

1. In Idle mode, press <Menu> and select **File manager** → **Images** → **Photos**.
2. Select the photo you want.



**Record a video**

1. In Idle mode, press and hold [  ] to turn on the camera.
2. Press [1] to switch to Record mode.
3. Press [  ] to start recording.
4. Press [  ] to stop recording. The video is saved automatically.

**Play a video**

1. In Idle mode, press <Menu> and select **File manager** → **Videos** → **Videos**.
2. Select the video you want.

**Play MP3s****Copy MP3 files to the phone**

Use these methods:

- Download from the wireless web ► p. 44
- Download from a computer using Samsung PC Studio  
► Samsung PC Studio User's Guide
- Receive via IrDA ► p. 85

**Create a play list**

1. In Idle mode, press <Menu> and select **Applications** → **MP3 player**.
2. Press <Options> and select **Add to list** → **Add all** or **Add a file**.
3. For **Add a file**, select a file and press <Add>. Repeat from step 2.

### Play MP3 file

1. From the MP3 player screen, press [OK/↵].
2. During playback, use the following keys:
  - [OK/↵]: pauses/resumes playback.
  - [Left]: goes back to the previous file.
  - [Right]: skips to the next file.
  - [Up]: opens the play list.
  - [Down]: stops playback.
  - [↶/↷]: adjusts the volume.

## Play games

### Select a game

1. In Idle mode, press <Menu> and select **Applications** → **Java world** → **Downloads** → **Forgotten Warrior**, **Freekick**, or **Arch Angel**.
2. Press any key to launch the game.

### Play Forgotten Warrior

1. Press <PLAY> and select **START GAME**.
2. Press <SKIP>.

### Play Freekick

Select **Game** → the game mode you want → a team → a player.

**Play Arch Angel**

1. Select **NEW GAME** → a game mode.
2. Press <**NEXT**> repeatedly and then <**PLAY**>.
3. Press <**NEXT**> repeatedly and then <**START**>, or <**SKIP**> to start the game immediately.


**Browse the web**

Using a built-in web browser, you can get easy access to the wireless web to get a variety of up-to-date services and information and to enjoy downloads of web content.

**Launch the browser**

In Idle mode, press [OK/↓].

**Navigate with the web browser**

- To scroll through browser items, press the Navigation keys.
- To select an item, press <✓>.
- To return to the previous page, press <**Back**> or [C].
- To return to the homepage, press and hold [C].
- To access browser options, press [\*] or select  on the top of the screen.

**Use Phonebook****Add an entry****To the phone's memory**

1. In Idle mode, enter a phone number and press <**Options**> and select **Save**.
2. Select **Phone** → a number type.

### Add an entry

(continued)

3. Specify the contact information: First name, Last name, Mobile, Home, Office, Fax, Other, Email, Graphic ID, Alert, Group, and Notes.
4. Press [**OK/↵**] to save the entry.

### To the SIM card

1. In Idle mode, enter a phone number and press <**Options**> and select **Save**.
2. Select **SIM**.
3. Enter a name.
4. Press [**OK/↵**] to save the entry.

### Find an entry

1. In Idle mode, press <**Contacts**>.
2. Select an entry.
3. Select a number and press [**↵**] to dial, or press <**Options**> to access options.

### Create and send a name card

1. In Idle mode, press <**Menu**> and select **Phonebook** → **My name card**.
2. Specify your contact information.
3. Press [**OK/↵**] to save the name card.
4. To send the name card to other people, press <**Options**> and select **Send via** → the sending method you want.

## Send messages

### Send a text message (SMS)

1. In Idle mode, press <Menu> and select **Messages** → **Create new message** → **Text message**.
2. Enter the message text.
3. Press <Options> and select **Save and send** or **Send only**.
4. Enter destination numbers.
5. Press [OK/↵] to send the message.

### Send a multimedia message (MMS)

1. In Idle mode, press <Menu> and select **Messages** → **Create new message** → **Multimedia message**.
2. Select **Subject**.
3. Enter the message subject and press [OK/↵].
4. Select **Picture & Video** or **Sound** and add a media file.
5. Select **Message**.
6. Enter the message text and press [OK/↵].
7. Press <Options> and select **Send**.
8. Enter destination numbers or addresses.
9. Press [OK/↵] to send the message.

### Send an e-mail

1. In Idle mode, press <**Menu**> and select **Messages** → **Create new message** → **Email**.
2. Select **Subject**.
3. Enter the e-mail subject and press [OK/↵].
4. Select **Message**.
5. Enter the e-mail text and press [OK/↵].
6. Select **File attach**.
7. Add image, video, music, or sound files.
8. Press <**Options**> and select **Send**.
9. Enter e-mail addresses.
10. Press [OK/↵] to send the e-mail.

## View messages

### View a text message

When a notification appears:

1. Press <**View**>.
2. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select a text message.

### View a multimedia message

When a notification appears:

1. Press <**View**>.
2. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select a multimedia message.

### View an e-mail

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Email box**.
2. Press <**Select**> when **Check new mail** is highlighted to retrieve an e-mail or a header.
3. Select an e-mail or a header.
4. If you selected a header, press <**Options**> and select **Retrieve**.

## Enter text

### ABC, T9, Number, and Symbol mode

You can enter text for some features such as messaging, Phonebook, or Calendar, using ABC mode, T9 mode, Number mode, and Symbol mode.

## Changing the text input mode

The text input mode indicator appears when the cursor is in a text field.

- Press the right soft key to change the text input mode. Or, press and hold the right soft key and select the mode you want.

**A Eng** : ABC mode

**T9 Eng** : T9 mode

**1 Eng** : Number mode

**S Eng** : Symbol mode

- Press and hold [**#**] to switch between T9 and ABC modes.
- Press and hold [**\***] to switch to Symbol mode.

## Using ABC mode

Press the appropriate key until the character you want appears on the screen.

Keys	Characters in order displayed	
	Upper case	Lower case
1	. , - ? ! ' @ : 1	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	0	

## Tips for using ABC mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.



- Press [#] to insert a space.
- Press [\*] to shift case. Lower Case (No indicator), Initial capital (↑), and Capital lock (⬆) are available.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

## Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

### Entering a word in T9 mode

1. Press [2] to [9] to start entering a word. Press each key once for each letter.  
For example, press [4], [3], [5], [5], and [6] to enter *HELLO* in T9 mode.  
T9 predicts the word that you are typing, and it may change with each key that you press.
2. Enter the whole word before editing or deleting characters.

3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed.  
For example, *OF* and *ME* use [6] and [3].
4. Press [#] to insert a space and enter the next word.

### Tips for using T9 mode

- Press [1] to enter periods or apostrophes automatically.
- Press [\*] to shift case in T9 mode. Lower Case (No indicator), Initial capital (↑), and Capital lock (⬆) are available.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

### Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.

2. Press [**0**] to display alternative words for your key presses. When there are no more alternative words, **Spell** appears on the bottom line.
3. Press <**Spell**>.
4. Enter the word you want using ABC mode and press <**OK**>.

## Using Number mode

Number mode enables you to enter numbers.  
Press the keys corresponding to the digits you want.

## Using Symbol mode

Symbol mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].
select a symbol	the corresponding number key.
clear the entered symbol(s)	[C].
insert the symbol(s)	< <b>OK</b> >.

## Call functions

### Advanced calling features

## Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [↵].

- ☑ Press [C] to clear the last digit or press and hold [C] to clear the whole display. You can move the cursor to edit an incorrect digit.

## Making an international call

1. In Idle mode, press and hold [0]. The + character appears.
2. Enter the country code, area code, and phone number, then press [↵].

## Redialling recent numbers

1. In Idle mode, press [↵] to display the list of recent numbers.
2. Scroll to the number you want and press [↵].

## Making a call from Phonebook

Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook. ► p. 31

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ► p. 34

## Dialling a number from the SIM card

1. In Idle mode, enter the location number for the phone number you want and press [ # ].
2. Find the number your want.
3. Press <Dial> or [ ↵ ] to dial the number you want.

## Ending a call

Close the phone or press [ ⏏ ].

## Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.

Press <Accept> or [ ↵ ] to answer the call.

## Tips for answering a call

- When **Anykey answer** in the **Extra settings** menu is active, you can press any key, except for <Reject>, [ ⏏ ], and [ ⏏ ]. ► p. 79
- Press <Reject> or [ ⏏ ] to reject a call.
- Press and hold [ ⏏ ] to reject a call or mute the ringer, depending on the **Side key** setting. ► p. 79

## Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <View>.
2. If necessary, scroll through the missed calls.
3. Press [ ↵ ] to dial the number you want.

## Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the right side of the phone.

The button on the headset work as listed below:

To	Press
redial the last call	the button twice.
answer a call	and hold the button.
end a call	and hold the button.

### Options during a call

You can access a number of functions during a call.

#### Adjusting the volume during a call

Use [**▲**/**▼**] to adjust the earpiece volume during a call.

Press [**▲**] to increase the volume level and [**▼**] to decrease the volume level.

#### Using the external speaker

Use the optional external speaker to talk and listen with the phone a short distance away.

1. During a call, plug the speaker into the phone.  
Speaker mode is automatically activated.

2. Press [**OK/END**] to return to normal phone mode.

### Placing a call on hold/Retrieving

Press <**Hold**> or <**Retrieve**> to place a call on hold or retrieve the call.

### Making a second call


You can make another call if your network supports it.

1. Press <**Hold**> to put the call on hold.
2. Make the second call in the normal way.
3. Press <**Swap**> to switch between the calls.
4. Press <**Options**> and select **End held call** to end the call on hold.
5. To end the current call, press [**END**].

### Answering a second call

You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature. ► p. 83

1. Press [**ANSWER**] to answer the call. The first call is automatically put on hold.

2. Press <**Swap**> to switch between the calls.
3. Press <**Options**> and select **End held call** to end the call on hold.
4. To end the current call, press [].

## Transferring a call

You can transfer the currently active call to a caller on hold, if your network supports it. With this option, the two callers can talk to each other, but you are disconnected from the call.

Press <**Options**> and select **Transfer**.

## Using the menu options

You can access Menu mode and use menu functions.

- ☒ During a call, some menu functions are not available.

Press <**Options**> and select **Menu**.

## Using the voice clarity feature

This feature removes extraneous noise and increases call quality so that the person with whom you are speaking can hear you clearly even if you are in a noisy place.

Press <**Options**> and select **Voice clarity on** or **Voice clarity off**.

## Switching off the microphone (Mute mode)

You can temporarily switch off your phone's microphone so that the person on the phone cannot hear you.

Press <**Options**> and select **Mute** or **Unmute**.

## Muting or sending key tones

You can turn the key tones off or on.

Press <**Options**> and select **Mute keys** or **Send keys**.

- ☒ To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

### Using Phonebook

You can access the **Phonebook** menu to locate or store entries. ► p. 31

Press <**Options**> and select **Phonebook**.

### Sending a sequence of DTMF tones

Dual tone multi-frequency (DTMF) tones are the tones used in phones for tone dialling.

You can send DTMF tones as a group after entering the entire number you need to send or retrieving a number from Phonebook. This feature is helpful for entering a password or an account number when you call an automated system, like a banking service.

1. When connected with a teleservice system, press <**Options**> and select **Send DTMF**.
2. Enter the number you need to send and press <**OK**>.

### Using the message service

You can access the **Messages** menu to read an incoming message and send a new message.

Press <**Options**> and select **Message**.

### Using SIM services

The **SIM service** menu is available if you use a SIM AT card in your phone. A SIM AT card provides services such as news, weather, sports, entertainment, and location services.

For details, see your SIM card instructions or contact your service provider.

### Making a multi-party call

Use this feature to allow as many as six people to join a multi-party call, or conference call.

Your service provider must support multi-party calls for you to use this feature.

### Setting up a multi-party call


1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.
3. Press <**Options**> and select **Join**. The first participant is added to the multi-party call.

4. If desired, call another person or answer an incoming call.
5. Press <**Options**> and select **Join**.
6. Repeat steps 4 and 5 as desired.

### Having a private conversation with one participant

1. Press <**Options**> and select **Split**.
2. Select a name or number from the participant list.  
You can talk privately with that person, while the other participants converse with each other.
3. To return to the multi-party call, press <**Options**> and select **Join**.

### Disconnecting one participant

1. Press <**Options**> and select **Remove**.
2. Select a name or number from the participant list.  
The participant is dropped from the call, but the call continues with the other parties.
3. Close the phone or press [] to end the multi-party call.

## Menu functions

*All menu options listed*

### Call records (Menu 1)

Use this menu to view the calls you have dialled, received, or missed, the length of your calls, and the cost of your calls.

 


To access this menu, press <**Menu**> in Idle mode and select **Call records**.

### Current contacts (Menu 1.1)

---

This menu displays the most recent calls dialled, received, or missed.

### Accessing a call record

1. Press [Left] or [Right] to select a call type.
2. Press [Up] or [Down] to scroll through the call list.
3. Press [/>] to view the details of a call, or [>] to dial a number.

### Using call record options

While viewing the call list, press <**Options**> to access the following options:

- **Details:** display the details of the selected call.
- **Call:** dial the number.
- **Save as contacts:** save the number in Phonebook.
- **Send message:** send an SMS or MMS message.
- **Delete:** delete the selected call record or all call records.

### Missed calls (Menu 1.2)

---

This menu displays the most recent calls that you did not answer.

### Dialled calls (Menu 1.3)

---

This menu displays the most recent calls you have dialled.

### Received calls (Menu 1.4.)

---

This menu displays the most recent calls you have received.

### Select and delete (Menu 1.5)

---

Use this menu to select the call record type(s) and delete all of the records in the selected call type(s).

1. Press [**OK/✓**] to check the call type(s) to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

### Call time (Menu 1.6)

---

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time:** check the length of your last call.
- **Total sent:** check the total length of all the calls you have dialled.
- **Total received:** check the total length of all the calls you have received.



- **Reset timers:** reset the call timers. You need to enter the phone password.

☒ The password is preset to **00000000**. You can change this password. ► p. 86

## Call costs *(Menu 1.7)*

This network feature displays the cost of calls. This menu is available only if your SIM card supports this feature. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all of your calls. If the total cost exceeds the maximum cost set in **Set max cost**, you must reset the counter before you can make another call.
- **Max cost:** check the maximum cost limit set in **Set max cost**.
- **Reset counters:** reset the cost counters.
- **Set max cost:** set the maximum cost authorised for your calls.

- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

## Phonebook *(Menu 2)*

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook.

To access this menu, press <**Menu**> in Idle mode and select **Phonebook**.

### Contact list *(Menu 2.1)*

Use this menu to search for numbers in Phonebook.

☒ Press <**Contacts**> in Idle mode to quickly access this menu.

### Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name you want from the list.

3. Select a number and press [**\**] to dial the number, or **<Options>** to access Phonebook options.

### Using Phonebook options

While viewing the contact list or contact details, press **<Options>** to access the following options:

- **View:** display details about the contact.
- **Edit:** edit the contact information.
- **Send message:** send an SMS or MMS message.
- **Copy:** copy the contact to the phone's memory or the SIM card.
- **Add new contact:** add a new contact to the phone's memory or the SIM card.
- **Send via:** send the contact via SMS, MMS, e-mail, or infrared port.
- **Delete:** delete the selected contact or all contacts.
- **Language select:** select a language to be used in the text input mode.

### FDN list (Menu 2.2)

---

Use this menu to create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers, if your SIM card supports this feature. You can activate FDN mode in the **FDN mode** menu. ► p. 86

### Adding a contact

1. From the FDN list, press **<Options>** and select **Add**.
2. Enter your PIN2 and press **<OK>**.
3. Enter a name and phone number, or press **<Options>** and select **Contact list** to retrieve a contact from Phonebook.
4. If necessary, change the location number.
5. Press **<Save>** to save the contact.

### Using contact options

Scroll to a contact and press **<Options>** to access options. ► "Using Phonebook options"

## Add new contact *(Menu 2.3)*

---

Use this menu to add a new contact to Phonebook.

### Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.
  - **First name/Last name**: assign a name.
  - **Mobile/Home/Office/Fax/Other**: add a number in any category.
  - **Email**: assign an e-mail address.
  - **Graphic ID**: assign an image as a caller ID image to alert you to a call from the number.
  - **Alert**: assign a ringer melody to alert you to a call from the contact.
  - **Group**: assign the contact to a caller group.
  - **Notes**: add a memo about the person.
3. Press <**Save**> to save the contact.

## Storing a number on the SIM card

1. Select **SIM**.
2. Enter a name and press [Down].
3. Enter a phone number.
4. Press [Down] and change the location number, if necessary.



If you select the **Graphic ID, Alert, Group** line, the contact must be saved to the phone's memory.

5. Press <**Save**> to save the contact.

## Group *(Menu 2.4)*

---

Use this menu to organise your contacts in caller groups.

### Adding members to a caller group

1. Select a group.
2. Press <**Add**>. The list of contacts stored in your phone's memory is displayed.
3. Scroll to a contact and press <**Select**>.

4. To add more contacts, press <**Options**> and select **Add** → a contact.
5. Repeat step 4 as desired.

### Managing caller groups

While viewing the group list, press <**Options**> to access the following options:

- **View**: display the members of the selected group.
- **Add**: add a new group.
- **Edit**: change the properties of the selected group.
- **Send message**: send SMS, MMS, or e-mail messages to the group members.
- **Delete**: delete the selected group. Group members, however, are not deleted from Phonebook.

### Speed dial *(Menu 2.5)*

---

Use this menu to assign a speed dial number (2 to 9) for eight of your most frequently called numbers.

### Assigning speed dial numbers

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select a contact you want from the contact list.
3. Select a number from the contact, if it has more than one number.

### Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Add**: assign a number to an unassigned key.
- **View**: view the number assigned to the key.
- **Change**: assign a different number to the assigned key.
- **Remove**: clear the speed dial settings for the selected key.

### Dialling speed dial entries

Press and hold the appropriate key in Idle mode.

## My name card *(Menu 2.6)*

---

Use this menu to create a name card and send it to other people.

### Saving your name card

The procedure for creating your name card is the same as the one for saving a phone number in the phone's memory. ► p. 33

### Using name card options

After saving your name card, press <**Options**> to access the following options:

- **Edit**: edit the name card.
- **Send via**: send the name card via SMS, MMS, e-mail, or infrared port.
- **Remove**: delete the name card.

## Own number *(Menu 2.7)*

---

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.

## Management *(Menu 2.8)*

---

Use this menu to manage Phonebook.

- **Default saving**: select a default memory location to save contacts.  
If you select **Ask on saving**, the phone will ask you to select a memory location when saving a number.
- **Copy all to phone**: copy all of the contacts stored on the SIM card to the phone's memory.
- **Sort by contacts**: change the sort order of Phonebook.
- **Select and delete**: select the memory location type(s) and delete all of the contacts in the selected location(s).
  1. Press [**OK/✓**] to check the location(s) to be cleared.
  2. Press <**Delete**>.
  3. Press <**Yes**> to confirm the deletion.

4. Enter the phone password and press <OK>.

☒ The password is preset to **00000000**. You can change this password. ► p. 86

- **Memory status:** display the number of contacts you have stored in Phonebook.

### Service number *(Menu 2.9)*

---

This menu is available if your SIM card supports Service Dialling Numbers (SDN). Use this menu to view the list of SDNs assigned by your service provider, including emergency numbers, directory enquiries, and voicemail numbers.

1. Scroll to the number you want.
2. Press <Dial> or [↵].

## Applications *(Menu 3)*

Use this menu to play Java games, to play music files, to record a voice memo, to set time zones and alarms, or to use the phone as a calculator, converter, timer, or stopwatch.

To access this menu, press <Menu> in Idle mode and select **Applications**.

### MP3 player *(Menu 3.1)*

---

Use this menu to enjoy music. First, you need to save MP3 files in your phone's memory.

#### Downloading or receiving music files

Use these methods to save MP3 files to your phone's memory:

- Download from the wireless web ► p. 44
- Download from a computer using the Samsung PC Studio program ► Samsung PC Studio User's Guide

- Via an active infrared port ► p. 85

The downloaded or received files are stored in the **Music** folder. ► p. 65

### Creating a play list

Add MP3 files to the play list.

1. From the MP3 player screen, press <**Options**> and select **Add to list**.
2. Select either of the following options:
  - **Add all**: add all of the files in the phone's memory to the play list.
  - **Add a file**: add specific files to the play list.
3. If you selected **Add a file**, scroll to a file and press <**Add**>. Repeat from step 2.
4. Press <**Back**> to go back to the MP3 player screen.

### Playing music files

From the MP3 player screen, press [OK/⏏].

During playback, use the following keys:

Keys	Function
OK/⏏	Pauses or resumes playback.
Left	Goes back to the previous file.
Right	Skips to the next file.
Up	Opens the play list.
Down	Stops playback.
<b>3</b>	Changes the repeat mode.
<b>6</b>	Switches to shuffle mode.
⏮/⏭	Adjusts the volume level.

### Using MP3 file options

From the MP3 player screen, press <**Options**> to access the following options:

- **Play**: play the selected files in the play list.
- **Send via**: send the selected file via e-mail or infrared port.

- **Open play list:** display the play list.
- **Set as:** set the file as your alarm sound, ringtone, or a caller alert melody for a Phonebook entry.
- **Delete:** delete the selected file.
- **Settings:** change the default settings for playing music files.

**Repeat mode:** select a repeat mode.

**Shuffle:** set the MP3 player to play music in random order.

**Lock volume key:** lock [▲/▼] to prevent accidental key presses from affecting playback.

**Volume:** select a volume level.

- **Properties:** access the file properties.

### Accessing the play list

From the MP3 player screen, press [Up] to access the play list.

Press <**Options**> to access the following options:

- **Play:** play the currently selected file.
- **Add to list:** add files to the play list.

- **Move list:** move the selected file to the position you want within the play list.
- **Remove:** remove the selected file or all files from the play list.

### Voice recorder *(Menu 3.2)*

---

Use this menu to record voice memos. A voice memo can be up to one hour long.

#### Recording a voice memo

1. Press [OK/↵] to start recording.
2. Speak into the microphone.  
Press [OK/↵] to pause or resume the recording.
3. When you finish, press <**Save**> to save the voice memo.

After recording a voice memo, press <**Options**> to access the following options:

- **Play:** play back your voice memo.
- **Send via:** send the voice memo via MMS, e-mail, or infrared port.



- **Set as:** set the file as your alarm sound, ringtone, or a caller alert melody for a Phonebook entry.
- **Delete:** delete the voice memo.
- **Rename:** change the name of the voice memo.
- **Move to favourite sounds:** move the voice memo to the **Favourite sounds** folder.
- **Protection:** protect the voice memo from being deleted.
- **Properties:** access the properties of the voice memo.

### Playing a voice memo

1. From the Voice recorder screen, press <**Options**> and select **Go to voice list**.
2. Select a voice memo. The memo plays.

On the player screen, you can use the following keys:

Keys	Function
OK/ <b>i</b>	Pauses or resumes playback.
Left	Moves backward in a file.

Keys	Function
Right	Moves forward in a file.
Up	Goes back to the Voice recorder screen.
Down	Stops playback.
⏮/⏭	Adjusts the volume.

### Using voice recorder options

From the Voice recorder screen, press <**Options**> to access the following options:

- **Record:** record a new voice memo.
- **Settings:** change the default settings for recording a voice memo.
  - Recording time:** select a maximum recording time.
  - Volume:** select a volume level.
  - Default name:** change the default prefix of the voice memo.
- **Go to voice list:** go to the voice memo list.

### Java world (Menu 3.3)

---

Use this menu to access and play Java games and to change the network settings for accessing Java services.

#### Using Java game options

From the Java world screen, select **Downloads** and press **<Options>** to access the following options:

- **Launch:** launch the selected game.
- **Application settings:** set a game to be continued when a call comes in or an alarm sounds during the game. You can also set the phone to exchange game information with the network while playing an online game or when you need to connect to the Internet.
- **Delete:** delete the game.
- **Properties:** access the game properties.

#### Playing Forgotten Warrior

1. From the **Java world** menu, select **Downloads** → **Forgotten Warrior**.
2. Press any key.

3. Press **<PLAY>**.
4. Select **START GAME** or **CONTINUE**.
5. Press **<SKIP>** to start a game.

☒ During a game, press **<OPTIONS>** to access game options.

#### Playing Freekick

1. From the **Java world** menu, select **Downloads** → **Freekick**.
2. Press any key.
3. Select **Game** → the game mode you want → a team → a player.

☒ During a game, press **[#]** to access game menus.

#### Playing Arch Angel

1. From the **Java world** menu, select **Downloads** → **Arch Angel**.
2. Press any key.
3. Select **NEW GAME** or **LOAD GAME** → a game mode.

4. Press <**NEXT**> repeatedly and then <**PLAY**>.
5. Press <**NEXT**> repeatedly and then <**START**>, or <**SKIP**> to start the game immediately.

☒ During a game, press <**OPTIONS**> to access game options.

## Changing Java settings

You can change the settings for accessing Java services.

1. From the **Java world** menu, select **Settings**.
2. Change the following settings:
  - **APN**: enter the access point name.
  - **Login ID**: enter the user ID.
  - **Password**: enter the password.
  - **Proxy**: select whether or not you use a proxy server to access network services. Depending on this setting, options in **Proxy settings** vary.
  - **Proxy settings**: provide you with the following options:

*When the proxy is set to **Enable**:*

**IP address**: enter the HTTP proxy address.

**Port**: enter the port number.

*When the proxy is set to **Disable**:*

**DNS1**: enter the primary DNS address.

**DNS2**: enter the secondary DNS address.

## Checking memory status

You can view the amount of total and used memory for Java games.

From the **Java world** menu, select **Memory status**.

## World time *(Menu 3.4)*

Use this menu to set your local time zone and find out what time it is in another part of the world.

## Setting your local time zone

1. From the world map, press [Left] or [Right] to select the city that corresponds to your home time zone. As the time line moves, the time and date of the given zone display.

2. Press **<Options>** and select **Save** to save the time zone.

### Viewing and setting a foreign time zone

1. From the world map, press [Down].
2. Press [Left] or [Right] to select the foreign time zone you want to view.
3. Press **<Options>** and select **Save** to save the time zone.

### Applying Daylight Savings Time

1. From the world map, press **<Options>** and select **Set daylight saving time**.
2. Press [**OK/↓**] to check the time zone(s) you want.
3. Press **<Save>**.

### Alarm *(Menu 3.5)*

---

Use this menu to set alarms to sound at specific times.

#### Setting an alarm

1. Select the type of alarm.
2. Select **On** on the **Alarm** line and press [Down].

3. Enter the time for the alarm to sound and press [Down].
4. If necessary, select **AM** or **PM** in 12-hour time format and press [Down].



You can change the time format. ► p. 77

5. Select the day(s) on which you want to the alarm to ring.
6. Select the **Alarm tone** line.
7. Select an alarm melody.
8. Press **<Save>** and then **<Yes>**.

#### Stopping an alarm

- When an alarm sounds, press **<OK>** or any key to stop the alarm.
- When a wake-up alarm sounds, press **<OK>** or [**OK/↓**] to stop the alarm.

Otherwise, press **<Snooze>** or any key to stop the alarm and cause it to sound again after 5 minutes. You can do this a maximum of five times.

## Setting the alarm to ring even if the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to ring, the phone is switched on and sounds the alarm.

## Calculator (Menu 3.6)

---

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

1. Enter the first number.
  - Press the left soft key to insert a decimal point or bracket.
  - Press [**\***] or [**#**] to move the cursor.
2. Press one of the Navigation keys to access the math function you want.
3. Enter the second number.
4. Press [**OK/↓**] to view the result.

## Convertor (Menu 3.7)

---

Use this menu for common conversions, such as currency and temperature.

1. Select a converter.
2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted and press [Down].
  - Press [**\***] to insert a decimal point.
  - Press [**#**] to change the temperature to above zero (+) or below zero (-)
4. Press [Left] or [Right] to select the unit you want to convert to.  
The equivalent value for the amount you entered displays.

## Timer (Menu 3.8)

---

Use this menu to set a period of time for the phone to count down. The phone will sound an alarm when the specified period of time has expired.

### Starting the timer

1. Press <**Set**>.
2. Enter the length of time you want to count down and press <**OK**>.
3. Press [**OK/⏏**] to start counting down.

### Stopping the timer

- Press any key when the timer rings.
- Press [**OK/⏏**] on the Timer screen to stop the timer before it rings.

### Stopwatch (Menu 3.9)

---

Use this menu to measure elapsed time. The precision of the stopwatch is one one-hundredth of a second.

1. Press [**OK/⏏**] to start the stopwatch.
2. Press [**OK/⏏**] to check an interval. You can repeat this step for a total of 4 intervals.
3. To reset the stopwatch, press <**Reset**>.

### SIM AT (Menu 3.0)

---

This menu is available if you use a SIM AT card that provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

### Browser (Menu 4)

The web browser on your phone allows you to access the wireless web. Using the web browser, you can access up-to-date information and a wide variety of media content, such as wallpapers, ringtones, and music files.

To access this menu, press <**Menu**> in Idle mode and select **Browser**.


## Home (Menu 4.1)

Use this menu to connect your phone to the network and load the homepage of the wireless web service provider. You can also press [OK/↵] in Idle mode.

### Navigating with the web browser

To	Press
scroll through browser items	the Navigation keys.
select a browser item	<✓> or [OK/↵].
return to the previous page	<Back> or [C].
return to the homepage	and hold [C].

### Using browser menu options

Press [✱] or select  on the top of the screen to access the following options:

- **Back:** go back to the previous page.
- **Home:** go back to the homepage.
- **Exit:** exit the web browser.


- **Reload:** reload the current page.
- **Show URL:** display the URL address of the current web page.
- **About ...:** access version information for your web browser.

### Using web page options

From any web page, press [#] to access the following options:

- **Go to URL:** enter the URL address of a website and access the website.
- **Bookmarks:** save URL addresses to quickly access websites.
- **Messages:** send SMS messages or view the messages stored in the phone.
- **File manager:** access images, videos, music files, and sound files stored in the phone's memory.

### Exiting the web browser

Press [] to exit the browser.

### Bookmarks (Menu 4.2)

---

Use this menu to save URL addresses in order to quickly access websites.

#### Adding a bookmark

1. Select an empty location.
2. Enter a name for the bookmark and press [Down].
3. Enter a URL address and press <**Options**> and select **Save**.

#### Accessing a bookmarked page

Scroll to a bookmark item and press [OK/↵].

#### Using bookmark options

After saving an item, press <**Options**> to access the following options:

- **Go:** access the bookmarked website.
- **Edit:** edit the address and name of the bookmark.
- **Delete:** delete the selected bookmark.

### Go to URL (Menu 4.3)

---

Use this menu to manually enter the URL address of a website and access the website.

### Clear cache (Menu 4.4)

---

Use this menu to clear the cache, a temporary memory that stores recently accessed web pages.

### Profile settings (Menu 4.5)

---

Use this menu to set up servers for the web browser. Contact your service provider for details about your settings options.

For each server, the following options are available:

- **Profile name:** assign a name to the server profile.
- **Home URL:** set the address of your homepage.
- **Bearer:** select a bearer for each type of network address accessed.



- **Proxy:** select whether or not the phone uses a proxy server to launch the web browser. Your service provider can tell you if your network requires a proxy server, and they can give you the appropriate settings.

- **GPRS settings:** customise the following GPRS network settings:

*When the proxy is set to **Enable**:*

**Proxy IP:** enter the HTTP proxy server address.

**Proxy port:** enter the port number.

**APN:** enter the access point name of the GPRS network gateway.

**Login ID:** enter the user ID.

**Password:** enter the password.

*When the proxy is set to **Disable**:*

**DNS1:** enter the primary address.

**DNS2:** enter the secondary address.

**APN:** enter the access point name of the GPRS network gateway.

**Login ID:** enter the user ID.

**Password:** enter the password.

- **GSM settings:** customise the following GSM network settings:

*When the proxy is set to **Enable**:*

**Proxy IP:** enter the HTTP proxy server address.

**Proxy port:** enter the port number.

**Dial number:** enter the PPP server phone number.

**Login ID:** enter the user ID.

**Password:** enter the password.

**Data call type:** select a data call type.

*When the proxy is set to **Disable**:*

**DNS1:** enter the primary address.

**DNS2:** enter the secondary address.

**Dial number:** enter the PPP server phone number.

**Login ID:** enter the user ID.

**Password:** enter the password.

**Data call type:** select a data call type.

### Current profile (Menu 4.6)

---

Use this menu to activate one of the proxy servers you have set up.

### Messages (Menu 5)

Use the **Messages** menu to send and receive text messages, multimedia messages, and e-mails. You can also use web push message, and cell broadcast message features.

To access this menu, press <**Menu**> in Idle mode and select **Messages**.


### Create new message (Menu 5.1)

---

Use this menu to create and send SMS, MMS, or e-mail messages.

#### Text message (Menu 5.1.1)

Short Message Service (SMS) allows you to send or receive text messages that may include pictures, animated images, and melodies.

 The maximum number of characters allowed in a text message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

1. Enter your message.
2. Press <**Options**> to access one of the following options:
  - **Insert**: retrieve a text template, contact, or bookmark item.
  - **Add picture/Add animation/Add melody**: add a picture, animated image, or melody to the message.
  - **Attach**: add a name card or calendar memo.
3. When you have finished, press <**Options**> and select **Save and send** or **Send only**.
4. Enter a destination number.

To send the message to more than one recipient, press [Down] and fill in additional destination fields.
5. Press [OK/✓] to send the message.

## Multimedia message (Menu 5.1.2)

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Select the **Subject** line.
2. Enter the message subject and press [OK/↵].
3. Select the **Picture & Video** or **Sound** line and add an image, a video, or a sound file.

☒ The maximum size allowed for an MMS message can differ depending on the country.

4. Select the **Message** line.
5. Enter the message text and press [OK/↵].
6. Press <**Options**> to access the following options:
  - **Edit**: edit the subject or text of your message.
  - **Change image/Change video/Change sound**: change the added image, video, or sound.
  - **Preview**: check the message you created.

- **Add page**: add pages. Move to each page by pressing [Left] or [Right] on the message screen.
  - **Delete page**: delete the current page.
  - **Edit page**: set the page duration or move the current page to the next or previous page.
  - **Remove subject/Remove media/Remove sound/Remove message**: clear the subject, image or video, sound, or text.
7. When you have finished, press <**Options**> and select **Send**.
  8. Enter a phone number or e-mail address.  
To send the message to more than one recipient, press [Down] and fill in additional destination fields.
  9. Press [OK/↵] to send the message.

### Email (Menu 5.1.3)

You can send e-mails that include text, audio, and images. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account and profile. ► p. 61

1. Select the **Subject** line.
2. Enter the subject of your e-mail and press [OK/↵].
3. Select the **Message** line.
4. Enter the e-mail text and press [OK/↵].
5. Select the **File attach** line.
6. Add media files. Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.
7. When you have finished, press <Options> to access the following options:

☒ Options may vary depending on the selected field.

- **Edit:** edit the subject or text.
- **View:** play an added item.

- **Remove subject/Remove message:** clear the subject or text.
- **Remove:** delete the selected attachment or all attachments.
- **Remove all attachments:** delete all attachments.

8. When you have finished, press <Options> and select **Send**.
9. Enter an e-mail address.  
To send the e-mail to more than one recipient, press [Down] and fill in additional destination fields.
10. Press [OK/↵] to send the e-mail.

### My messages (Menu 5.2)

---







Use this menu to store all of the messages you have received, sent, or tried to send.



#### Inbox (Menu 5.2.1)

This folder stores all of the messages you have received, except for e-mails.

## Viewing a message

The following icons may appear on the message list; depending on the message type or status, icons may vary:

-  SMS / Delivery report
-  MMS
-  MMS notification;  indicates that MMS has been retrieving from the server and  indicates that MMS has been failed to retrieve.
-  Web push

- ☒ According to the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded. They are indicated by .
- A  icon next to a message means that a message is of high priority. A grey-coloured message icon is of low priority.

While viewing the message list, press <Options> to access the following options:

- ☒ Options may vary depending on your country or service provider.

- **View:** open the message.
- **Retrieve:** retrieve the MMS message from the server.
- **Reply via SMS:** reply to the sender via SMS.
- **Reply via MMS to:** reply to the sender via MMS.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to my folder:** move the message to the **My folders** folder.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

### Using message options

While viewing a message, press <**Options**> to access the following options:

#### SMS messages

- **Reply via:** reply to the sender via SMS or MMS.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to phone/SIM:** move the message between the SIM card and the phone's memory.
- **Add to block list:** add the sender's number to the **Block number** list.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Cut media:** save media content from the message into your phone's memory.
- **Protection:** protect the message from being deleted.

#### MMS messages

- **Reply via SMS:** reply to the sender via SMS.
- **Reply via MMS to:** reply to the sender via MMS.
- **Forward:** forward the message to other people.
- **Delete:** delete the message or all messages.
- **Add to block list:** add the sender's number to the **Block number** list.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Cut media:** save media content from the message into your phone's memory.
- **Properties:** access the message properties.

#### Web push messages

- **Go to URL:** connect to the URL specified in the message.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.

## Delivery report messages

- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.

## Draft (Menu 5.2.2)

This folder stores messages you have saved to send at a later time.

While viewing the message list, press <**Options**> to access the following options:

- **Edit:** edit the message.
- **Send:** send the message.
- **Delete:** delete the message or all messages.
- **Move to my folder:** move the message to the **My folder** box.
- **Move to phone/SIM:** move the message between the SIM card and the phone's memory.
- **Sort by:** change the sort order of the message list.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

## Outbox (Menu 5.2.3)

This folder stores messages that the phone is attempting to send or has failed to send.

While viewing a message, press <**Options**> to access the following options:

- **Send again:** send the message again.
- **Open file:** open the attached file.
- **Save file:** save the attached file in the phone's memory.
- **Delete:** delete the selected message.
- **Move to phone/SIM:** move the message between the SIM card and the phone's memory.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

From the message list, press <**Options**> to access the following options:

- **Cancel sending:** cancel sending the message, if the message is being sent.
- **View:** open the message.
- **Send again:** send the message again.

- **Delete:** delete the message or all messages.
- **Move to my folder:** move the message to **My folder** box.
- **Move to phone/SIM:** move the message between the SIM card and the phone's memory.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

### Sentbox (Menu 5.2.4)

This folder stores messages that you have sent.

While viewing a message, press <**Options**> to access the following options:

- **Forward:** forward the message to other people.
- **Open file:** open the attached file.
- **Save file:** save the attached file in the phone's memory.
- **Delete:** delete the message.
- **Move to phone/SIM:** move the message between the SIM card and the phone's memory.

- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

From the message list, press <**Options**> to access the following options:

- **View:** open the message.
- **Forward:** forward the message to other people.
- **Delete:** delete the selected message.
- **Move to my folder:** move the message to the **My folder** box.
- **Move to phone/SIM:** move the message between the SIM card and the phone's memory.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.







 
 
## Email box (Menu 5.2.5)

This folder stores e-mails that you have received.


1. Select an e-mail account.
2. Press <**Select**> when **Check new mail** is highlighted to get new e-mails from the server.

The phone checks for new e-mails and retrieves received e-mails.

The following icons may appear on the message list; depending on the e-mail status, icons may vary:

-  has been read
-  has not been read
-  has been retrieved from the server
-  has not been retrieved;  indicates that an e-mail has been retrieving from the server and  indicates that an e-mail has been failed to retrieve.



A  icon next to a message means that a message is of high priority. A grey-coloured message icon is of low priority.

3. Scroll to an e-mail or header and press [OK/↵].
4. If the e-mail has more than one page, press [↶/↷] to scroll through pages one by one.  
Press and hold [↶/↷] to move to the first or last page.
5. Select an attached file to view or play it.
6. Press [\*] or [#] to move to the previous or next e-mail.

While viewing the e-mail content or message list, press <**Options**> to access the following options:



Options may vary depending on the status of the e-mail.

- **View:** open the selected item.
- **Retrieve:** retrieve one or all of the e-mails from the e-mail server.
- **Open file:** open the attached file.

- **Save file:** save the attached file in the phone's memory.
- **Reply to:** send a reply to the sender or to all of the other recipients.
- **Forward:** forward the e-mail to other people.
- **Mark as read:** mark the e-mail as read.
- **Delete selection:** delete the selected e-mail.
- **Delete all:** delete all e-mails.
- **Move to my folder:** move the e-mail to the **My folder** box.
- **Add to block list:** add the sender's e-mail address to the filter list to reject e-mails from that address.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Cut attachment:** save media content from the message to your phone's memory.
- **Properties:** access the e-mail properties.

### **My folder** (Menu 5.2.6)

Use this menu to save the message you have saved in this folder while reading a message.

While viewing a message list, press **<Options>** to access the following options:

- **View:** view the message.
- **Delete:** delete the selected message or all of the messages.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

### **Templates** (Menu 5.3)

---

Use this menu to create, edit, and send text templates and MMS templates.

#### **Text template** (Menu 5.3.1)

Use this menu to preset a maximum of frequently used messages.

From the Text template list, press <**Options**> to access the following options:

- **Edit**: change the selected template.
- **Send message**: send the template as an SMS, MMS, or e-mail message.
- **Delete**: delete the template.

### **MMS template** (Menu 5.3.2)

When you access this menu, you can view the list of templates you have saved.

From the MMS template list, press <**Options**> to access the following options:

- **View**: open the template message.
- **Send message**: send the template as an MMS message.
- **Edit**: change the selected template.
- **Add new**: add a new template.
- **Delete**: delete the template or all templates.

### **Select and delete** (Menu 5.4)

---

Use this menu to select the message type(s) and delete all of the messages in the selected message type(s).

1. Press [**OK/✓**] to check the message type(s) to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

### **Settings** (Menu 5.5)

---

Use this menu to set up various options for using the messaging service.

#### **Text message** (Menu 5.5.1)

You can configure default SMS settings.

- **Send settings**: set up the following options for sending a text message:
  - Reply path**: allow the recipient to reply to you through your message centre.

**Delivery report:** set the network to inform you when your message has been delivered.

**Character support:** select a character encoding type. If you select **Auto**, the phone switches the encoding type from GSM-alphabet to Unicode if you enter an Unicode character. Use of Unicode encoding will reduce the maximum number of characters in a message to about half. If this menu is not shown, your phone provides the Auto character encoding by default.

**Validity period:** set the length of time your messages are stored in the SMS centre.

**Message type:** set the default message type. The network can convert the messages into the selected format.

**Service centre:** store or change the number of your message centre.

- **Block number:** specify phone numbers from which messages will not be accepted. Numbers specified here are also included in the MMS blocking list.

## Multimedia message (Menu 5.5.2)

You can configure default MMS settings.

- **Send settings:** set up the following options for sending a multimedia message:

**Delivery report:** set the network to inform you when your message has been delivered.

**Address hiding:** set your address to be hidden from the recipient's phone.

**Read reply:** determine whether or not the phone sends a read-reply request.

**Priority:** set the priority level of your messages.

**Expiry date:** set the length of time your messages are stored in the MMS centre.

**Delivery after:** set a time delay before messages are sent.

**Send size:** select maximum size of attached items allowed for an MMS message.

- **Receive settings:** set up the following options for receiving a multimedia message:

**Anonymous reject:** reject messages from unknown senders.

**Advert allowed:** accept advertisements.

**Report allowed:** send a delivery report from the network to the sender.

**Home reception:** determine if your phone retrieves new messages automatically when you are in your home service area.

**Roaming reception:** determine if your phone retrieves new messages automatically when you are roaming in another network.

Home reception and Roaming reception have the following options:

- **Automatic:** the phone automatically retrieves messages from the server.
- **Reject:** the phone rejects all messages.
- **Manual:** the phone displays notifications. Use the **Retrieve** option to manually download new messages.

- **MMS profiles:** select a connection profile to be used for MMS.

**Current profile:** select a profile.

**Profile settings:** customise the following options for each profile.

- **Profile name:** assign a name to the MMS profile.
- **Server URL:** enter the address of your MMS server.
- **Proxy:** connect to the GPRS network using the proxy server.
- **GPRS settings:** customise the settings required for connecting to the GPRS network.
  - IP address:** (when the proxy is set to **Enable**) enter the IP address.
  - Port:** (when the proxy is set to **Enable**) enter the port number.
  - DNS1:** (when the proxy is set to **Disable**) enter the primary address.

**DNS2:** (when the proxy is set to **Disable**) enter the secondary address.

**APN:** enter the access point name used for the address of the GPRS network.

**Login ID:** enter the user ID.

**Password:** enter the password.

- **Version:** select the maximum file size of MMS attachments.

- **Block number:** specify phone numbers from which messages will not be accepted. Numbers specified here are also included in the SMS blocking list.

### Email (Menu 5.5.3)

You can configure default network settings that are required to send or receive e-mails.

- ☒ You cannot change e-mail profile settings while an e-mail is being sent or retrieved.

- **Send settings:** set up the following options for sending an e-mail:

**Send copy to self:** send a copy of your e-mail to your own e-mail address.

**Delivery confirm:** set the network to inform you when your e-mail has been delivered.

**Read confirm:** send a request for a reply along with your e-mail.

**Priority:** select the priority level of your e-mail.

**Include signature:** attach your name, phone number, or a simple memo to your e-mail.

**Edit name:** enter the name in your signature.

**Edit telephone number:** enter the phone number in your signature.

**Edit note:** enter a simple memo in your signature.

- **Receive settings:** set up the following options for receiving e-mails.

**Check interval:** determine how often the phone checks the server for incoming e-mails.

If you set this option to **Not used**, you can use the **Check new mail** option to check your e-mail manually.

**Read reply:** determine whether or not the phone sends a read-reply request.

When this option is set to **Announce**, the phone reminds you to send a read-reply request with your e-mail address.

**Retrieve option:** determine whether or not the phone retrieves headers only or the entire e-mail.

**Delete option:** determine whether e-mails are deleted immediately or the next time you connect to the server.

**Reject if over:** determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.

**Leave a copy of messages on the server:** leave copies of e-mails after retrieving.

- **Email account:** set up an e-mail account and select an account to be used.

**Current account:** select an account.

**Account settings:** configure up to five e-mail accounts using different e-mail servers. The following options are available for each account:

- **In use:** activate the current e-mail account.
- **Account name:** enter a name for the currently selected account.
- **User name:** enter a user name.
- **Email address:** enter your e-mail address.
- **Reply address:** enter the e-mail address to which you want recipients to send reply messages.
- **User ID:** enter your e-mail ID.
- **Password:** enter your e-mail password.
- **SMTP server:** enter the IP address or domain name of the outgoing e-mail server.
- **SMTP port:** enter the SMTP port number.
- **Protocol type:** select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

The following options are available when the protocol type is **POP3**:

- **POP3 server:** enter the IP address or domain name of the server that receives your e-mail.

- **POP3 port:** enter the POP3 port number.
- **APOP login:** connect to the server by using the APOP login scheme when this option is selected.

These options are available when the protocol type is **IMAP4**:

- **IMAP4 server:** enter the IP address or domain name of the server that receives your e-mail.
- **IMAP4 port:** enter the IMAP4 port number.
- **Include attachments:** select this option to receive attachments with e-mails.
- **Max. Emails retrieved:** set the number of headers you will retrieve from the server.
- **Email profile:** configure the network settings required to send or receive e-mails.

**Current profile:** select a profile.

**Profile settings:** configure up to five e-mail profiles.

- **Profile name:** enter a profile name.
- **APN:** enter the access point name.

- **Login ID:** enter user ID.
- **Password:** enter the password.
- **DNS1:** enter the primary DNS address.
- **DNS2:** enter the secondary DNS address.

- **Block list:** set up an e-mail blocking list.

**Address list:** specify e-mail addresses to reject e-mails from those addresses.

**Subject list:** specify subjects to reject e-mails which contain those subjects.

### Push message *(Menu 5.5.4)*

You can change the settings for receiving web push messages from the wireless web server. The following options are available:

- **Receive:** set how your phone receives push messages.
- **Service centre:** enter the address of the server from which you want to receive push messages, when the **Receive** option is set to **SMS-C specific**.



## Broadcast messages *(Menu 5.6)*

The Cell Broadcast service delivers short messages on various such as the weather or traffic.

Use this menu to change the settings for the service and access broadcast messages.

- **Read:** open received messages.  
The **Temporary** box saves network messages until the phone is switched off.  
The **Archive** box saves network messages indefinitely. Press <**Options**> and select **Save** when a text notification appears. The message is saved in the **Archive** box.
- **Receive:** enable or disable the reception of broadcast messages.
- **Channel:** specify the channels from which you receive broadcast messages.  
When you select **Respective channels**, you can set up a list of active CB channels.

- **Language:** select the language in which broadcast messages display.

Please contact your service provider for details.


## Memory status *(Menu 5.7)*

Use this menu to view the maximum memory and available memory for each message type. You can also view the amount of memory currently in use in each folder.

## File manager *(Menu 6)*

The **File manager** menu allows you to access images, videos, music files, and sound files stored in the phone's memory.

To access this menu, press <**Menu**> in Idle mode and select **File manager**.

- ☒ According to the DRM (Digital Rights Management) system, web content may not be able to be forwarded. The content is indicated by .

### Images (Menu 6.1)

---

This menu displays photos you have taken and images downloaded or received in messages.

#### Viewing an image

1. Select an image folder.
2. Scroll to an image and press [OK/↵].

#### Using image options

While viewing an image or the image list, press <**Options**> to access the options.

- **View:** display the image.
- **List:** show the image list.
- **Send via:** send the image via MMS, e-mail, or infrared port.
- **Set as:** set the image as your wallpaper or caller ID image for a Phonebook entry.
- **Edit:** add emoticons, frames, or effects to the image.
- **Delete:** delete the image or all images.
- **Rename:** change the name of the image.

- **Move to favourite images:** move the image to the **Favourite images** folder.
- **Slide show:** set all images to display as a slide show. You can select a time interval between images.
- **Protection:** protect the image from being deleted.
- **Properties:** access the image properties.

### Videos (Menu 6.2)

---

This menu displays video clips you have recorded, downloaded, or received in messages.

#### Playing a video clip

1. Select a video folder.
2. Scroll to a clip and press [OK/↵]. ▶ p. 39

During playback, use the following keys.

Keys	Function
OK/↵	Pauses or resumes playback.
Left	Moves backward in the file.

Keys	Function
Right	Moves forward in the file.
Down	Stops playback.
⏮/⏭	Adjusts the volume.

### Using video options

While viewing the video list, press <**Options**> to access the options.

- **Play:** play the video clip.
- **Send via:** send the video clip via MMS, e-mail, or infrared port.
- **Delete:** delete the video clip or all video clips.
- **Rename:** change the name of the video clip.
- **Move to favourite videos:** move the video clip to the **Favourite videos** folder.
- **Protection:** protect the video clip from being deleted.
- **Properties:** access the properties of the video clip.

### Music (Menu 6.3)

This menu displays MP3 files you have downloaded, received in messages, or imported from your computer.

### Playing a music file

Scroll to a file and press [OK/⏮]. ▶ p. 37

### Using music options

While viewing the music list, press <**Options**> to access the following options:

- **Play:** play the music file.
  - **Send via:** send the file via e-mail or infrared port.
  - **Add play list:** add the selected file to the play list.
  - **Set as:** set the file as your ringtone, alarm tone or as a caller alert melody for a Phonebook entry.
  - **Delete:** delete the selected file or all files.
  - **Settings:** change the default settings for playing music files.
- Repeat mode:** select a repeat mode.

**Shuffle:** select a playing order.

**Lock volume key:** lock [▲/▼] to prevent accidental key presses from affecting playback.

**Volume:** select a volume level.

- **Rename:** change the name of the file.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

### Sounds *(Menu 6.4)*

---

This menu displays sound files you have recorded, downloaded, or received in messages.

#### Playing a sound clip

1. Select a sound folder.
2. Scroll to a clip and press [OK/↵]. ► p. 37

#### Using sound options

While viewing the sound list, press <**Options**> to access the following options:

- **Play:** play the sound file.

- **Send via:** send the file via MMS, e-mail, or infrared port.
- **Set as:** set the file as your ringtone, alarm tone or as a caller alert melody for a Phonebook entry.
- **Delete:** delete the selected file or all files.
- **Rename:** change the name of the file.
- **Move to favourite sounds:** move the sound clip to the **Favourite sounds** folder.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

### Other files *(Menu 6.5)*

---

Files that you receive but which are not supported by your phone are stored in this folder. These unsupported file formats include \*.doc, \*.hwp, \*.ppt, \*.txt.

While viewing the file list, press <**Options**> to access the following options:

- **Send via:** send the file via e-mail or infrared port.
- **Delete:** delete the selected file or all files.

- **Rename:** change the name of the file.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

## Memory status *(Menu 6.6)*

You can check the total amount of memory for media items and the amount of memory currently in use in each media box.

## Calendar *(Menu 7)*





The Calendar feature enables you to keep track of your schedule and to-do list, to view missed alarm events, and to make a memo.

To access this menu, press **<Menu>** in Idle mode and select **Calendar**.

## Consulting the calendar

When you enter the **Calendar** menu, the calendar in Month view appears with today's date indicated by a blue box.

The number of events for the specific day appears at the bottom of the calendar. The following icons indicate the type of event:

-  Scheduled event
-  Anniversary
-  To-do item
-  Memo

Press **<Options>** to access the following options:

- **View mode:** change the view mode of the calendar.
- **Create:** add a new event.
- **Go to:** go to the current date or a specific date.
- **Sort by:** sort items by the type of event.
- **Delete:** delete items stored on the calendar by using various deleting options.

☒ You can only delete scheduled event with a repeating alarm on Day view.

- **Missed alarm events:** view events whose alarms you have missed.
- **Memory status:** view the memory status for items stored in the phone's memory.

## Creating an event

---

You can schedule up to 400 events on the calendar, and schedule more than one event per day.

### Entering a new scheduled event

1. Scroll to a date on the calendar.
2. Press <**Options**> and select **Create** → **Schedule** or **Miscellaneous**.
3. Enter information or change the settings in the following entry fields:
  - **Subject**: enter the title of the event.
  - **Details**: enter event details.
  - **Start date** and **Start time**: enter the starting date and time for the event.
  - **AM/PM**: select **AM** or **PM**.
  - **End date** and **End time**: enter the ending date and time for the event.
  - **AM/PM**: select **AM** or **PM**.
  - **Location**: (for **Schedule**) enter information about the event location.
  - **Alarm**: set an alarm for the event.

- **before**: set how long before the event the alarm is to alert you.
- **Alarm tone**: select an alarm tone.
- **Repeat**: (for **Schedule**) select to set the event to recur and a repeat unit.
- **until**: (for **Schedule**) if the event will recur, set the ending date.

4. Press <**Save**> to save the event.

### Entering a new anniversary

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Anniversary**.
3. Enter information or change the settings in the following entry fields:
  - **Occasion**: enter information about the anniversary.
  - **Date**: enter the date.
  - **Alarm**: select to set an alarm for the anniversary.

- **before:** set how long before the event the alarm is to alert you.
  - **Alarm time:** enter the time for the alarm to sound.
  - **AM/PM:** select **AM** or **PM**.
  - **Alarm tone:** select an alarm tone.
  - **Repeat every year:** select to set the phone to remind you of the anniversary every year.
4. Press <**Save**> to save the event.

### Entering a to-do item

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **To do**.
3. Enter information or change the settings in the following entry fields:
  - **To do:** enter information about the item.
  - **Start date:** enter the starting date.
  - **Due date:** enter the ending date.
  - **Priority:** select a priority level.
4. Press <**Save**> to save the event.

### Viewing an event

Square brackets on a calendar date indicate the events scheduled for that day.

1. Select a date on the calendar to display the events for the day.
2. Select an event to view its details.

While viewing an event or the event list, press <**Options**> to access the following options:

- **View:** display the event details.
- **Edit:** edit the event.
- **Create:** add a new event.
- **Send via:** send the event via SMS, MMS, e-mail, or infrared port.
- **View mode:** change the view mode of the calendar.
- **Done/Undone:** mark the to-do item as done, or not.
- **Sort by:** sort items by the type of events.
- **Delete:** delete items stored on the calendar by using various deleting options.

## *Menu functions*

- **Missed alarm events:** view events whose alarms you have missed.
- **Memory status:** view the memory status for items stored in the phone's memory.

### **Viewing an event in different mode**

---

By default, the calendar appears in Month view mode.








Press <**Options**> and select **View mode** to change the mode.

#### **Day view**

You can view events for the selected date.

Select an event to view its details.

The following icons will be displayed according to the event's type and status:

-  Alarm set
-  Recurring event
-  Completed to-do
-  To-do priority; : high, : normal, and : low

#### **Week view**

You can view events (only for items stored for Schedule) for the selected week.

A cell on the timetable indicates the presence of event information.

Select the cell that contains the event you want.

### **Viewing a missed alarm event**

---


When you are unable to acknowledge an alarm for a scheduled event of anniversary, the phone stores the missed alarm event until you confirm it.

1. Press <**Options**> and select **Missed alarm events**.
2. Select an event.
3. Press <**Confirm**> to confirm and delete the event.



## Camera (Menu 8)

You can use the camera module embedded in your phone to take photos and record videos.

To access this menu, press <Menu> in Idle mode and select **Camera**, or press and hold [].

- ☒ • Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.


### Take a photo

You can take photos in various modes using the phone. The camera produces JPEG photos.

- ☒ When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. Access the **Camera** menu to turn on the camera. The image to be captured appears on the display.

- ☒ Be careful not to cover the camera lens with your hand.


2. Adjust the image by aiming the camera lens at the subject.
  - Press the left soft key to access camera options. See the next section.
  - Use the keypad to change the camera settings or switch to other modes. ► p. 73
3. Press [] to take a photo. The photo is saved in the **Photos** folder.

4. To	Press
use photo options	<Options>. ► p. 73
delete the photo	<Delete> and then <Yes>.
return to Capture mode	[OK/⏏].

### Using camera options in Capture mode

In Capture mode, press the left soft key to access the following options:

- **Record video:** switch to Record mode.
- **Shooting mode:** take a photo in the following modes:
  - Single shot:** take a photo in normal mode.
  - Multi shot:** take a series of action stills. Select the number of photos the camera will take.
- **Effects:** change the colour tone or apply a special effect to a photo.
- **Frames:** apply a decorative frame to a photo.
- **Flash:** use the one of the following flash options:
  - Off:** turn off the flash.
  - Shoot only:** turn the flash on for the current shot. After you take a photo, the flash turns off.
  - Permanent:** use the flash when you take a photo.
- **Timer:** set a time delay before the camera takes a photo.

- **Go to photos:** go to the **Photos** folder.
- **Settings:** change the default settings for taking a photo.
  - Size:** select an image size.
  - Quality:** select an image quality.
  - View finder:** change the view mode.
  - Shutter sound:** select the sound that you hear when you press the shutter release, [].
  - Zoom sound:** turn on or off the sound that you hear when zooming in or out.
  - Brightness sound:** turn on or off the sound that you hear when adjusting the image brightness.
  - Default name:** change the default prefix of the photo name.
- **Camera short cuts:** view the functions of the keys you can use.

## Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Key	Function
↕	Flips the image vertically.
↖	Shows the mirror image.
Left/Right	Adjusts the brightness of the image.
Up/Down	Zooms in or out.
<b>1</b>	Switches to Record mode. ► p. 74
<b>2</b>	Changes the image size.
<b>3</b>	Changes the image quality.
<b>4</b>	Changes the camera mode.
<b>5</b>	Changes the colour tone or applies a special effect to a photo.
<b>7</b>	Selects a decorative frame.

Key	Function
<b>8</b>	Sets the timer.
<b>9</b>	Goes to the <b>Photos</b> folder.
<b>0</b>	Determines the flash use.
<b>*</b>	Changes the preview screen.

## Using photo options

After saving a photo, press <**Options**> to access the following options:

- **Take another:** return to Capture mode.
- **Send via:** send the photo via MMS, e-mail, or infrared port.
- **Set as:** set the photo as your wallpaper for the idle screen or as a caller ID image for a Phonebook entry.
- **Delete:** delete the photo.
- **Rename:** change the name of the photo.
- **Go to photos:** go to the **Photos** folder.

- **Protection:** protect the photo from being deleted.
- **Properties:** access the photo properties.

### Viewing a photo

1. In Capture mode, press the left soft key and select **Go to photos**.
2. Scroll to a photo and press [OK/✓].

While viewing a photo or the photo list, press <**Options**> to access the following options:

- **View:** view the photo on the full screen.
- **List:** return the screen to the photo list.
- **Send via:** send the photo via MMS, e-mail, or infrared port.
- **Set as:** set the photo as your wallpaper for the Idle screen or as a caller ID image for a Phonebook entry.
- **Edit:** add emoticons, frames, or effects to the image.
- **Delete:** delete the photo or all photos.
- **Rename:** change the name of the photo.

- **Move to favourite images:** move the photo to the **Favourite images** folder.
- **Slide show:** set all photos to display as a slide show. You can select a time interval between photos.
- **Protection:** protect the photo from being deleted.
- **Properties:** access the photo properties.

### Recording video

---

You can record a video of what is displayed on the camera screen and save it as a .3gp file.

1. In Capture mode, press [1].
2. Aim the camera lens at the subject to adjust the image.
  - Press the left soft key to access camera options. See the next section.
  - Use the keypad to change the camera settings or switch to other modes. ► p. 76
3. Press [REC] to start recording.

- Press [**STOP**] to stop recording. The video is automatically saved in the **Videos** folder.

To	Press
play back the video clip	[ <b>OK/ENTER</b> ].
use video options	the left soft key. ► p. 76
delete the video clip	[ <b>C</b> ] and then < <b>Yes</b> >.
return to Record mode	the right soft key.

### Using camera options in Record mode

In Record mode, press the left soft key to access the following options:

- Take a photo:** switch to Capture mode.
- Effects:** change the colour tone or apply a special effect to a video.
- Flash:** turn the flash on or off.
- Timer:** set a time delay before the camera starts recording.
- Go to videos:** go to the **Videos** folder.

- Settings:** change the following settings for recording a video:

**Recording mode:** select a video recording mode.

Select **Limit of MMS** to record a video suitable for an MMS or e-mail message. The video clip is saved in 3GP format.

Select **Normal** to record a video within the limit of the currently available memory.

**Size:** select a file size.

**Quality:** select an image quality.

**Audio rec.:** record audio with a video clip.

**Default name:** change the default prefix of the file name.

- Camcorder short cuts:** view the functions of the keys you can use.

## Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode:

Keys	Function
↕	Flips the image vertically.
↔	Shows the mirror image.
Left/ Right	Adjusts the brightness of the image.
Up/ Down	Zooms in or out.
1	Switches to Capture mode. ► p. 71
2	Changes the frame size.
3	Changes the image quality.
4	Changes the video recording mode.
5	Changes the colour tone or applies a special effect to a video clip.

Keys	Function
7	Mutes or unmutes the audio.
8	Sets the timer.
9	Goes to the <b>Videos</b> folder.
0	Turn the flash on or off.

## Using video options

After saving a video clip, press the left soft key to access the following options:

- **Record another:** return to Record mode.
- **Send via:** send the video clip via MMS, e-mail, or infrared port.
- **Go to videos:** go to the **Videos** folder.
- **Rename:** change the name of the video clip.
- **Protection:** protect the video clip from being deleted.
- **Properties:** access the properties of the video clip.

## Playing a video clip

1. In Record mode, press the left soft key and select **Go to videos**.
2. Scroll to a video clip and press [OK/↵].

During playback, use the following keys:

Keys	Function
OK/↵	Pauses/resumes playback.
Left	Moves backward in a file.
Right	Moves forward in a file.
Down	Stops playback.
⏮/⏭	Adjusts the volume.

While viewing video list, press <**Options**> to access the following options:

- **Play:** play the selected video clip.
- **Send via:** send the video clip via MMS, e-mail, or infrared port.
- **Delete:** delete the video clip or all video clips.

- **Rename:** change the name of the video clip.
- **Move to favourite videos:** move the video clip to the **Favourite videos** folder.
- **Protection:** protect the video clip from being deleted.
- **Properties:** access the properties of the video clip.

## Settings *(Menu 9)*

Use this menu to customise your phone settings. You can also reset the settings to their default values.

To access this menu, press <**Menu**> in Idle mode and select **Settings**.

### Time & Date *(Menu 9.1)*

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in the **World time** menu.

► p. 41

- **Set time:** enter the current time.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select a time format.
- **Set date:** enter the current date.
- **Date format:** select a date format.

### Phone settings *(Menu 9.2)*

---

Many different features of your phone's system can be customised to suit your preferences.

#### Language *(Menu 9.2.1)*

Use this menu to select one of several languages for the display text.

#### Greeting message *(Menu 9.2.2)*

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

#### Slide settings *(Menu 9.2.3)*

Use this menu to set how the phone reacts when you open it for an incoming call, and when you close it while using a function.

- **Up:** set whether or not to answer a call by opening the phone.
- **Down:** set whether or not the phone maintains the menu you are using when you close the phone.



When you set **Down** to **Continue operation**, the keypad lock works just in Idle mode.

### Short cut *(Menu 9.2.4)*

You can use the Navigation keys as shortcut keys to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

#### Assigning a shortcut menu

1. Scroll to a key to be used as a shortcut key.
2. Press <**Options**> and select **Change**.
3. Select a menu to be assigned to the key.

#### Using shortcut options

Press <**Options**> to access the following options:

- **Change:** assign or change a shortcut menu.
- **Remove:** deactivate the shortcut assignment to the selected key.



- **Remove all:** deactivate all shortcut assignments.

### Side key *(Menu 9.2.5)*

Use this menu to set how the phone reacts when you press and hold [**⏏**] when a call comes in.

- **Mute:** the keys mutes the call ringer.
- **Reject:** the key rejects a call.

### Extra settings *(Menu 9.2.6)*

You can turn the automatic redialling or answering feature on or off. You can also activate the voice clarity feature.

- **Auto redial:** set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Anykey answer:** answer an incoming call by pressing any key, except <**Reject**>, [**⏏**], and [**📞**].

When this option is not selected, you must press <**Accept**> or [**↵**] to answer a call.

- **Voice clarity:** increase the microphone's sensitivity to allow the other person on the phone to hear your voice clearly, even through you may be whispering.

### Display settings *(Menu 9.3)*

---

Use this menu to change settings for the display and light.

#### Wallpaper *(Menu 9.3.1)*

You can change the background image that is displayed in Idle mode.

#### Text display *(Menu 9.3.2)*

You can change the display settings for the text displayed on the idle screen.

- **Text position:** select a text position on the display. If you don't want to display text in Idle mode, select **Off**.
- **Text style:** select a text style.
- **Text colour:** select a text colour.

### **Calendar** (Menu 9.3.3)

You can display the calendar of the current month on the idle screen.

### **Skin** (Menu 9.3.4)

You can select a skin colour for Menu mode.

### **LCD brightness** (Menu 9.3.5)

You can adjust the brightness of the display for varying lighting conditions.

### **Backlight** (Menu 9.3.6)

You can select the length of time the backlight and the display stays on.

- **On:** select the length of time the backlight is on at times of inactivity.
- **Dim:** select the length of time the display is in Dimming mode after the backlight turns off.

### **Dialing font colour** (Menu 9.3.7)

Use this menu to display numbers in colours when entering a phone number for dialling.

### **Show caller information** (Menu 9.3.8)

Use this menu to have a caller's phone number, or name if saved in Phonebook, shown on the main display after you have missed a call.

### **Sound settings** (Menu 9.4)

---

Use this menu to customise various sound settings.

#### **Incoming call** (Menu 9.4.1)

Use this menu to select a volume and alert type for incoming calls.

- **Ring tone:** select a ringtone for the call ringer.
- **Volume:** select a ringer volume.
- **Alert type:** specify how you are to be informed of incoming calls.

**Melody:** the phone rings using the selected ringtone.

**Vibration:** the phone vibrates but not rings.

**Vibration then melody:** the phone vibrates three times and then starts ringing.

**Keypad tone** (Menu 9.4.2)

Use this menu to select the tone that the phone sounds when you press a key.

- ☒ You can adjust the keypad tone volume using [↑/↓] in Idle mode.

**Message tone** (Menu 9.4.3)

Use this menu to set up the ringer for incoming messages.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed of any incoming messages.
- **Repetition:** specify how often the phone informs you of a new message.

**Power on/off** (Menu 9.4.4)

Use this menu to select the melody that the phone plays when it is switched on or off.

**Slide tone** (Menu 9.4.5)

Use this menu to select the tone that the phone sounds when you open or close the phone.

**Quiet mode** (Menu 9.4.6)

Use this menu to set how the phone acts to alert you to a specific event in Quiet mode, instead of making sounds.

- **Vibration:** set the phone to vibrate.
- **Mute:** mute all sound settings.

**Extra tones** (Menu 9.4.7)

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when it is connected to the system.

- **Alerts on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Indicative tones:** set the phone to beep when a pop-up window appears to indicate that your phone has completed an operation or that an error occurs.

### Network services (Menu 9.5)

---

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

#### Call diverting (Menu 9.5.1)

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
  - **Divert always:** divert all calls.
  - **Busy:** divert calls when you are on another call.

- **No reply:** divert calls when you do not answer the phone.
- **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
- **Cancel all:** cancel all call diverting options.

2. Select the type of calls to be diverted.
3. To activate call diverting, select **Activate**. Otherwise, select **Deactivate**.
4. Move to the **Divert to** line.
5. Enter the number to which calls are to be diverted and press **<Select>**.
6. If you selected **No reply**, move to the **Sec** line and select the length of time the network delays before diverting a call.

#### Call barring (Menu 9.5.2)

This network service allows you to restrict your calls.

1. Select a call barring option:
  - **All outgoing:** prohibit outgoing calls.

- **International:** prohibit international calls.
  - **International except to home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
  - **All incoming:** prohibit incoming calls.
  - **Incoming while abroad:** prohibit incoming calls when you use your phone outside of your home country.
  - **Cancel all:** cancel all call barring settings, allowing calls to be sent and received normally.
  - **Change barring password:** change the call barring password obtained from your service provider.
2. Select the type of calls to be barred.
  3. Select **Activate**. To deactivate call barring, select **Deactivate**.
  4. Enter the call barring password supplied by your service provider and press <**Select**>.

### Call waiting (Menu 9.5.3)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which call waiting option will apply.
2. Select **Activate** and press <**Select**>.  
To deactivate call waiting, select **Deactivate**.

### Network selection (Menu 9.5.4)

This network service allows you to either automatically or manually select the network to be used while roaming outside of your home area.

You can select a network other than your home network only if there is a valid roaming agreement between the two.

- **Automatic:** connect to the first available network when roaming.
- **Manual:** select the network you want.

### Caller ID (Menu 9.5.5)

This network service allows you to prevent your phone number from being displayed on the phone of the person being called. However, some networks do not allow the user to change this setting.

- **Default:** use the default setting provided by the network.
- **Hide number:** ensure your number does not display on the other person's phone.
- **Send number:** send your number each time you make a call.

### Voice mail server (Menu 9.5.6)

Use this menu to store the number of the voicemail server and access your voicemails.

- ☑ You must enter the voice server number before you can access your voicemails. Your service provider can give the voice server number.

- **Connect to voice mail:** connect to the voicemail server to allow you to listen to your messages. You can also connect to the voicemail server by pressing and holding [1] in Idle mode.
- **Voice server number:** enter the voicemail server number.

### Band selection (Menu 9.5.7)

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of the following types of networks: GSM 1900, Combined GSM 900/1800, and Tri band (GSM 900/1800/1900).

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you may need to change to an appropriate band.


When you select a new band, your phone automatically searches for all available networks. Your phone registers with a preferred network within the band.

## Infrared (Menu 9.6)

 
Use this feature to send and receive data through the infrared port.

- ☒ You cannot use the infrared feature while using multimedia features such as voice recorder, camera, and MP3 player, or vice versa.

To use an infrared connection, you must do the following:

- Configure and activate an IrDA-compliant infrared port on the other device.
- Activate the infrared feature on your phone (the IrDA icon  displays on the top line).
- Align the IrDA port on the phone with the IrDA port on the other device.

If there is no communication between your phone and the other IrDA-compliant device within 60 seconds of activating the feature, it is automatically deactivated.

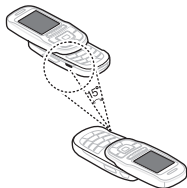

## Security (Menu 9.7)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- ☒ If you enter an incorrect PIN/PIN2 three times in succession, the SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your network operator.

### PIN check (Menu 9.7.1)

The 4- to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

### Change PIN (Menu 9.7.2)

Use this menu to change your PIN. The PIN check feature must be enabled to use this feature.

### **Phone lock** (Menu 9.7.3)

This feature locks the phone from unauthorised use. When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change password** menu.

### **Change password** (Menu 9.7.4)

Use this menu to change your phone password. The password is preset to **00000000**.

### **Privacy** (Menu 9.7.5)

Use this menu to lock your media content, including messages, images, videos, music files, and sounds.

1. Press [**OK/✓**] to check the item(s) to lock.
2. Press <**Save**>.
3. Enter the phone password and press <**OK**>.

To access a locked item, you need to enter the phone password.

### **SIM lock** (Menu 9.7.6)

The SIM lock feature allows your phone to work only with the current SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

### **FDN mode** (Menu 9.7.7)

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

### **Change PIN2** (Menu 9.7.8)

If supported by your SIM card, the change PIN2 feature changes your current PIN2.



## Memory status *(Menu 9.8)*

Use this menu to check the amount of memory being used for storing data in **Shared memory, Messages, File manager, Calendar, Phonebook, and JAVA world.**

## Reset settings *(Menu 9.9)*

Use this menu to reset the phone settings, display settings, and sound settings individually.

1. Press [**OK/✓**] to check the setting category(ies) to be reset.
2. Press <**Reset**> to reset the marked items.
3. Press <**Yes**> to confirm the reset.
4. Enter the phone password and press <**OK**>.

☒ The password is preset to **00000000**. You can change this password ► p. 86

## *Solve problems*

### *Help and personal needs*

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

### **When you switch on your phone, the following messages may appear:**

#### *"Insert SIM card"*

- Be sure that the SIM card is correctly installed.

#### *"Phone lock"*

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

#### *"Enter PIN"*

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.


### **"Enter PUK"**

- The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.


### **"No Service," "Network Failure," or "Not Done" displays**

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

### **You have entered a number but it was not dialled**

- Be sure that you have pressed [].
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

### **Your correspondent cannot reach you**

- Be sure that your phone is switched on. ([] pressed for more than one second.)

- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.




### **Your correspondent cannot hear you speaking**

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

### **The phone starts beeping and "Battery low" flashes on the display**

- Your battery is insufficiently charged. Recharge the battery.

### **The audio quality of the call is poor**

- Check the signal strength indicator on the display (). The number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

### **No number is dialled when you re-call a Phonebook entry**

- Use the Contact list feature to ensure the number has been stored correctly.
- Re-store the number, if necessary.

### **The battery doesn't charge properly or the phone sometimes turns itself off**

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

### **If the above guidelines do not help you to solve the problem, take note of:**

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

## *Health and safety information*

### **SAR certification information**

---

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.\*

The highest SAR value for this model phone was 0.471 W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

---

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

## Precautions when using batteries

---

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## Road safety

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

## Operating environment

---

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## **Electronic devices**

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted facilities**

Switch off your phone in any facility where posted notices require you to do so.

## Potentially explosive environments

---

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## Emergency calls

---

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [↵].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

## **Other important safety information**

---

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## **Care and maintenance**

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children or pets. They may inadvertently damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.



- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

# ***Index***

## **A**

- Alarm • 42
- Answering
  - call • 25
  - second call • 26
- Anykey answer • 79
- Auto redial • 79

## **B**

- Backlight time, set • 80
- Band selection • 84
- Barring, calls • 82
- Battery
  - charging • 7
  - low indicator • 8
  - precautions • 90
- Broadcast messages • 63

## **C**

- Calculator • 43
- Calendar • 67
- Call costs • 31
- Call records
  - dialled • 30
  - missed • 30
  - received • 30

- Call time • 30
- Caller group, managing • 34
- Caller ID • 84

## **Calls**

- answering • 25
- barring • 82
- diverting • 82
- holding • 26
- redialling • 24
- rejecting • 25
- transferring • 27
- waiting • 83

## **Camera**

- photos • 71
- videos • 74

## **CB (Cell Broadcast) messages • 63**

- Characters, enter • 22
- Conference call • 28
- Connection tone • 81
- Converter • 43
- Creating calendar
  - anniversaries • 68
  - events • 68
  - tasks • 69
- Creating messages
  - e-mail • 50

- MMS • 49
- SMS • 48

## **D**

### **Deleting**

- call records • 30
- e-mails • 56
- MMS 52
- Phonebook • 35
- photos • 74
- SMS • 51
- video clips • 77

### **Dialled calls • 30**

### **Dialling font colour • 80**

### **Display**

- icons • 10
- language • 78
- settings • 79

### **Diverting, calls • 82**

### **DTMF tones, send • 28**

## **E**

### **E-mails**

- creating/sending • 50
- deleting • 56
- setting • 60
- viewing • 55

### **Emergency calls • 93**

### **External speaker • 26**

## **F**

### **FDN (Fixed Dial Number) mode • 86**

### **File manager • 63**

### **Forwarding**

- e-mails • 56
- MMS • 52
- SMS • 52

## **G**

### **Games • 40**

### **Greeting message • 78**

## **H**

### **Health and safety • 89**

### **Holding, call • 26**

## **I**

### **Icons, description • 10**

### **Images, downloaded • 64**

### **Inbox, messages**

- e-mail • 55
- MMS • 52
- SMS • 52

### **Infrared, connect • 85**

### **International calls • 24**

**K**

- Key tone volume • 81
- Keypad tones
  - sending • 27
  - setting • 81

**L**

- Language, select • 78
- Last number, redial • 24
- Locking
  - media contents • 86
  - phone • 86
  - SIM card • 86
- Low battery indicator • 8

**M**

- Memory status
  - downloaded items • 67
  - phone • 87
  - Phonebook • 36
- Message tone • 81
- Messages
  - e-mail • 50
  - greeting • 78
  - MMS • 49
  - SMS • 48
  - web • 52

- Minute minder • 81

- Missed alarm events • 70

**Missed calls**

- call record • 30
- caller ID, set • 80

**MMS messages**

- creating/sending • 49
- deleting • 52
- setting • 58
- viewing • 50

**MP3 player**

- options • 37
- playing • 36

**Multi-party calls • 28****Music, downloaded • 65****Muting**

- key tones • 27
- microphone • 27

**N****Name card • 35****Names**

- entering • 22
- searching • 31

**Network band, select • 84****Network selection • 83****Network services • 82****O****Outbox, messages • 53****Own number • 35****P****Password**

- barring • 83
- phone • 86

**Phone**

- care and maintenance • 94
- display • 10
- icons • 10
- locking • 86
- password • 86
- resetting • 87
- switching on/off • 8
- unpacking • 6

**Phonebook**

- copying • 32
- deleting • 35
- editing • 32
- managing • 35
- options • 32
- speed-dialling • 34

**Photos**

- deleting • 74
- taking • 71
- viewing • 74

**PIN, change • 85****PIN2, change • 86****Power on/off tone • 81****Privacy • 86****Problems, solve • 87****R****Received calls • 30****Received message**

- cell broadcast • 63
- e-mail • 55
- MMS • 52
- SMS • 52
- web • 52

**Recording**

- videos • 74
- voice memos • 38

**Redialling**

- automatically • 79
- manually • 24

**Resetting phone • 87****Ringer**

- incoming calls • 80
- messages • 81
- Road safety • 91
- Roaming • 83

**S**

- Safety
  - information • 89
  - precautions • 1
- SDN (Service Dialling Numbers) • 36
- Security, calls • 85
- Sent messages • 54
- SIM card
  - inserting • 7
  - locking • 86
- SMS messages
  - creating/sending • 48
  - deleting • 51
- Sound settings • 80
- Sounds, downloaded • 66
- Speed-dial • 34
- Stopwatch • 44
- Switching on/off
  - microphone • 27
  - phone • 8

**T**

- Templates
  - MMS • 57
  - SMS • 56
- Text input mode, change • 22
- Text, enter • 22
- Timer • 43
- Tone
  - connect • 81
  - keypad • 81
  - message • 81
  - minute minder • 81
  - power on/off • 81
  - slide • 81

**V**

- Videos
  - deleting • 77
  - playing • 77
  - recording • 74
- Voice memos
  - playing • 39
  - recording • 38

**W**

- Waiting call • 83
- Web browser

- accessing • 45
- bookmarks • 46
- cache, clear • 46
- World time • 41

# Declaration of Conformity (R&TTE)

For the following product :

**GSM900/GSM1800/GSM1900**

**Portable Cellular Telephone**

(Product description)

**SGH-E350**

(Model name)

## Manufactured at :

- Samsung Electronics Co., Ltd, 94-1, Imsoo-Dong, Gumi City, Kyung-Buk, Korea,  
730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950-1:2001  
EMC : EN 301 489-01 v1.4.1 (2002-08)  
EN 301 489-07 v1.2.1 (2002-08)  
  
SAR : EN 50360:2001  
EN 50361:2001  
  
Network : EN 301 511 v9.0.2 (2003-03)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[ ] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK  
Identification mark: 0168

**CE 0168**

 
The technical documentation kept at :

**Samsung Electronics QA Lab.**

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK  
2005.06.17

(place and date of issue)



**Yong-Sang Park / S. Manager**

(name and signature of authorized person)

It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

- \* Depending on the software installed or your service provider or country, some of the descriptions in this manual may not match your phone exactly.
- \* Depending on your country, your phone and accessories may appear different from the illustrations in this manual.

**SAMSUNG ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.:GH68-07121A  
English. 07/2005. Rev 1.0